


Pear pushbutton BT-IP

User manual

Overview

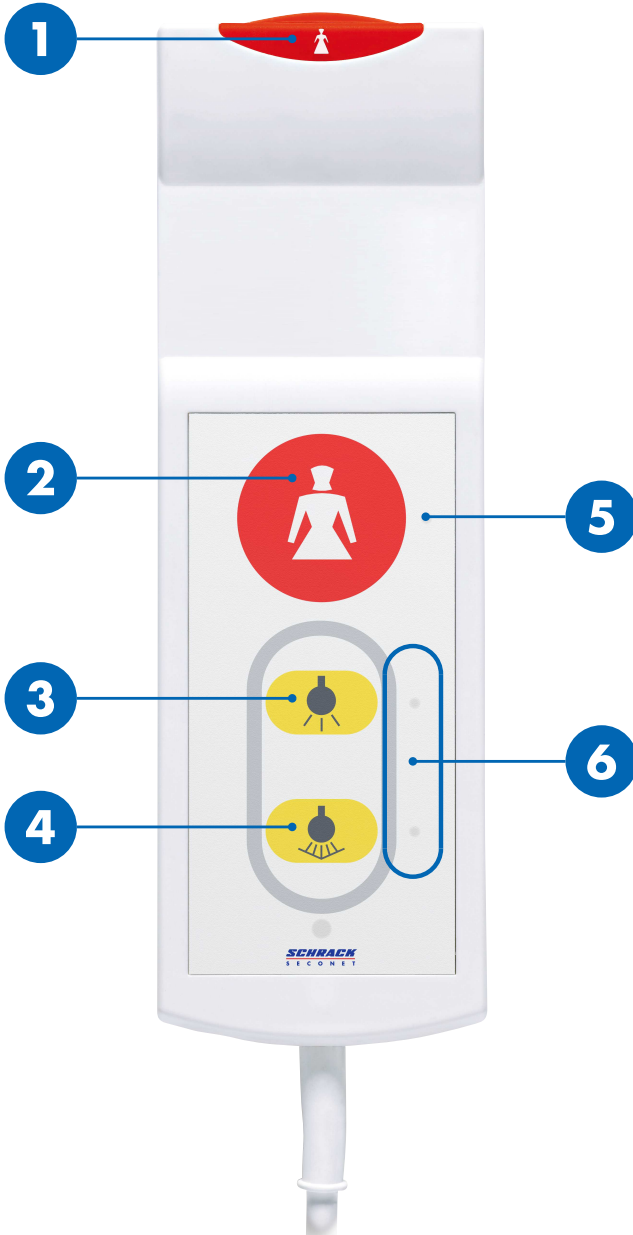

- 1 / 2** Call buttons
- 3** Room light
- 4** Reading light
- 5** LED of call button (reassurance light)
- 6** LED of light button (finder light)




CAUTION

Do not use as rising aid

Cable and device are no rising aid. Do not pull yourself up using the device.

Care staff call

The call button  **1** and the LED **5** are constantly lit, so that the buttons are easier to locate even in the dark.

Call care staff

Press call button  **1** or **2**.

- ▶ Call button  **1** and LED **5** light up.

Turn light on and off

The LED of the light buttons **6** are constantly lit, so that the buttons are easier to locate even in the dark.

Room light (optional)

Press the room light button  **3** briefly.

- ▶ Room light is turned on or off.

Reading light (optional)

Press the reading light button  **4** briefly.

- ▶ Reading light is turned on or off.

Schrack Seconet AG

Eibesbrunnnergasse 18 | A-1120 Vienna

+43 50 857 | office@schrack-seconet.com

[schrack-seconet.com](https://www.schrack-seconet.com)

Czech Rep., CZ-149 00 Prague 4, Štřitová 283 | +420 2 74784422

Hungary, HU-1119 Budapest, Fehérvári út 89-95 | +36 1 4644300

India, IN-122102 Gurgaon, C-704A, Pioneer Urban Square, Sec-62 | +91 124 4141501

Poland, PL-02-972 Warsaw, ul. Branickiego 15, Wilanów Office Park, bud. B1 | +48 22 3300620

Romania, RO-023961 București, Str. Mântuleasa nr. 15A/1 | +40 372 756316

Russia, RU-123001 Moscow, B. Sadovaya str. 5, build. 1 office 514 | +7 495 5105015

Slovakia, SK-831 06 Bratislava, Mudrochova 2 | +421 2 44635595

Sweden, SE-126 30 Hägersten, Vretenborgsvägen 28, Floor 9 | +46 8 6801860

Turkey, TR-34718 Kadıköy-İstanbul, Koşuyolu Mah. İsmailpaşa Sk.No: 78 | +90 216 3455199