



Operating panel Integral MAP

Quick user manual

FIRE ALARM

SCHRACK
SECONET

General operations

Normal operation

In an idle mode (standard indication), the display shows product and customer information. The list counters are set to 0. The **Operation 13** LED indicates the system's current operating status.

Fault messages

The **14** LED flashes and the fault's signal is sounding, if there are faults (Chapter *Reset alarm/fault signal*). The list of faults **Faults 20** displays the malfunctioning component with element type, element number and where applicable detector zone.

There may be an device or system fault or the emergency mode has been activated.

Emergency mode

(fire alarm control panels Integral EvoxX C and Integral EvoxX B)

If the error code **xxxx/29** is displayed for a fault in the active system, emergency mode is activated. Operating and indication functions are reduced; fire alarm system functions. Call the service department/customer service immediately (necessary information: equipment type and number, customer number, messages, error codes).

Reset alarm/fault signal

Pressing the button **Buzzer silenced 4** disables the signal tone of an active alarm or fault message in the fire alarm control panel; the LED remain lit up. Any additional alarm or fault message will trigger the alarm and fault signal tones again. Acknowledgement and intervention signal tones cannot be reset.

Delay

(Depends on programming)

Pressing the button **Delay 2** activates or deactivates the delay function. During the delay period it is for instance possible to activate the intervention function. If delayed switching has been activated (daytime program), then the button LED is lit, and if the night program is activated, then the LED is not lit (night program).

Disabling/actuating elements

(An authorisation code must be entered for this to be permitted)

Pressing the button of the element type to which the element belongs **8**. Enter the number of the element to be selected using the numerical buttons of the keypad **9**. Confirm with the enter button **↵**.

Pressing the button **Off 11** turns the element off. Pressing the button **On 10** turns the element on.

Further element operation

Pressing the button of the element type to which the element belongs **8**. Enter the number of the element to be selected using the numerical buttons of the keypad **9**. Confirm with the enter button **↵**.

Pressing the button **Other Commands 12** displays the list of all available commands. Using the scroll buttons **↑/↓** to scroll through all the entries in the list. Confirm with the enter button **↵**.




WARNING

Triggering automatically controlled outputs by maintenance

If extinguishing systems or other critical fire alarm devices are automatically controlled via a fire alarm control panel, then electrical, mechanical and optical measures must be taken when carrying out servicing and maintenance work, to ensure that the outputs cannot be accidentally triggered. Once the servicing or maintenance activities have been finished, the security precautions must once again be removed!

System operation in the event of an alarm

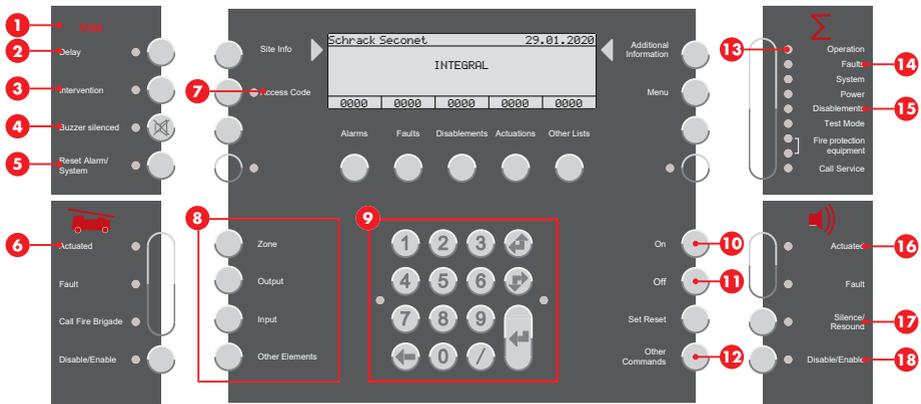

Fire alarm

A fire alarm is indicated visually and acoustically: The **FIRE** 1 indication flashes, the alarm signal sounds and the detector zone, detector number and the number of alarms that have been received are displayed on the operating panel display.

Reset (mute) or disable sirens

Only use this function when the building has been completely cleared.

Pressing the button **Silence/ Resound** 17 resets activated sirens (mutes them), but these are reactivated together with the arrival of the next alarm. LED lights up, if the sirens were reset.

Pressing the button **Disable/Enable** 18 switches off the main siren and all other sirens and alarm areas. The LED next to the button and the 15 LED lights up, if the alarm systems are disabled. The sirens are not activated, even not in case of an occurring alarm.

Exploration/intervention function

(Depends on programming; delay function must be activated)

Pressing the button **Intervention** 3 within the acknowledgement time activates the exploration/intervention function. The LED next to the button lights up and the signal tone for the acknowledgement period can be heard. The activation of the main detector output is delayed by the programmed intervention period.



CAUTION

Confirmed fire alarm

If a fire is actually discovered during intervention period, the fire brigade has to be notified immediately. The manual call point can be used for immediate alarm notification.

Reset alarm

(An authorisation code must be entered for this to be permitted)

Only use this function if it is ensured that there is no longer any danger or if you are instructed to do so by the fire brigade. The cause of the alarm message must be eliminated.

If it has been proven within the intervention period that there is no fire, then the alarm can be reset by pressing the **Reset Alarm/System** 5 button without the fire brigade being notified.

If the transmission equipment is actuated (LED **Actuated** 6 flashes), the alarm can no longer be reset.

Transmission system actuated

If the LED **Actuated** 6 flashes, then the location offering assistance has already been informed of the alarm.

Do not press another button, wait for the support and assistance staff to arrive. Have the necessary plans ready.



SCHRACK SECONET AG
Eibesbrunnnergasse 18
A-1120 Vienna
Tel. +43 1 81157
office@schrack-seconet.com
www.schrack-seconet.com

EN

FIRE ALARM

SCHRACK
SECONET